


# Illustrated Directions

FOR USING

OUR LATEST SPECIAL SET

OF

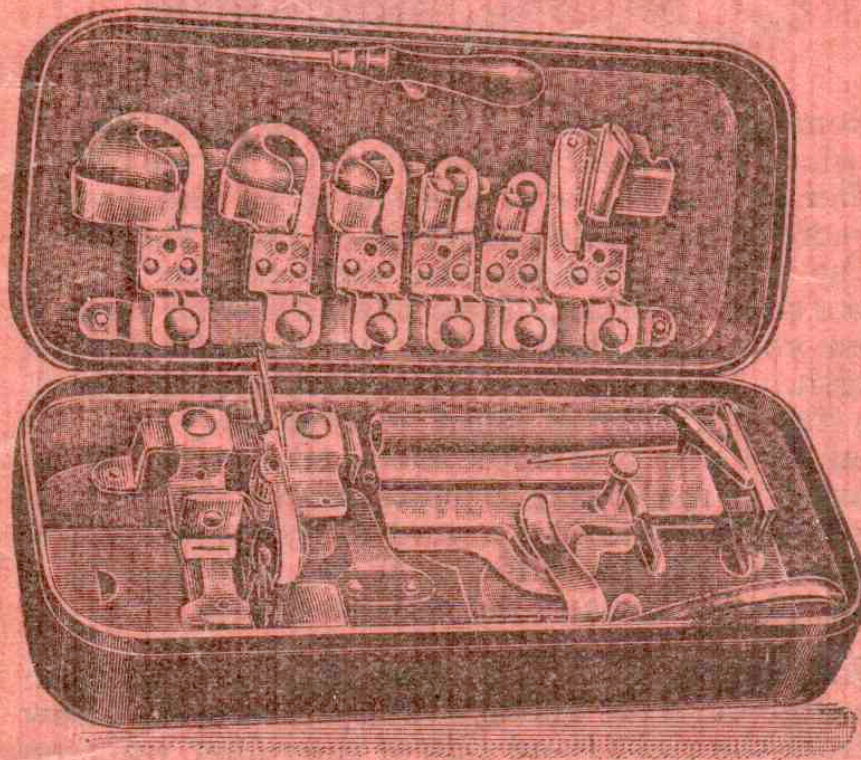


STEEL ATTACHMENTS

UPON THE

# New Home Machine.



## HOW TO USE THE RUFFLER

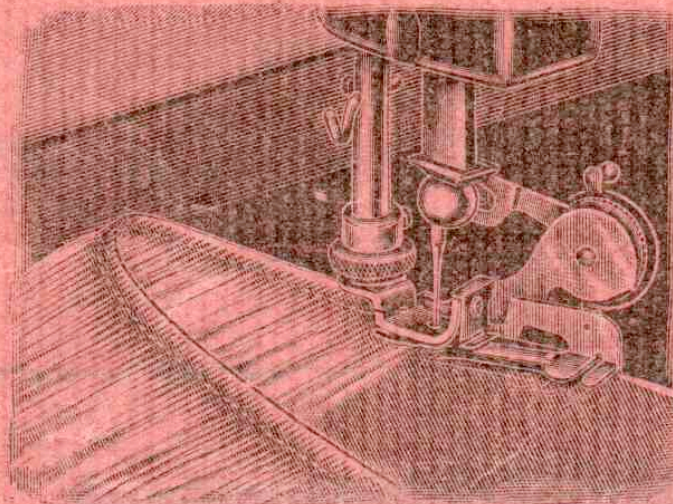

Remove the regular foot, and slip the ruffler in its place with the forks of the lever A (see cut of ruffler on page 4) over the shank of the needle set-screw, and fasten securely. Place the goods to be ruffled between the steel blades F. To make scant ruffling, move the adjusting lever B from you, and shorten the stitch to the desired length. The length of the stitch should match the size of gather or plait so that they will lie even and not pile upon each other or be too far apart. To make larger plaits, move the adjusting lever B toward you, and lengthen the stitch to match. If the ruffle is to be attached to a band, place the band below both blades.


For shirring or ruffling more than one inch from the edge of wide goods, slightly loosen the screw D from the right hand side of the ruffler when on the machine, and remove the part with the under blade F attached. Now remove the front shuttle race slide of the machine and slip the shirring slide G in its place, *pushing it in as far as it will go*, and proceed to ruffle as instructed above. When through put the blade F back again and fasten with the screw D.

*Never try to use both the slide G and under blade F at the same time, nor to ruffle without one of them. Never run the machine when the ruffler is on without goods between the steel blades, because the movement of the teeth of the upper blade against the lower will dull them and soon make it useless.*

Oil working parts lightly before using.



## HOW TO USE

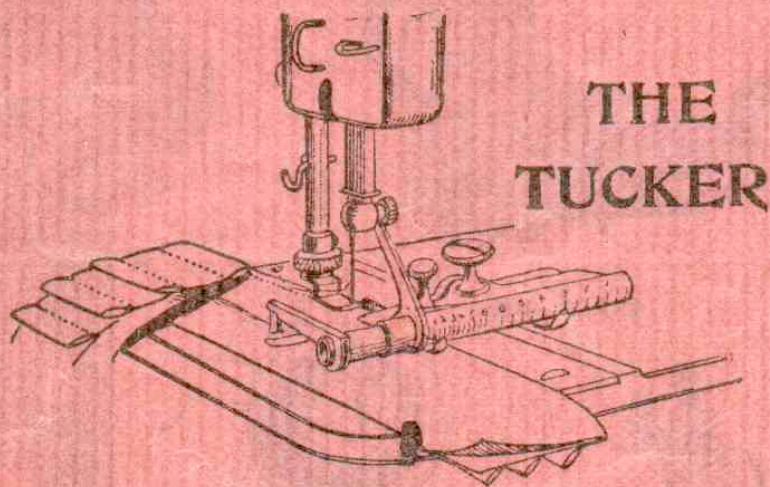


Remove the regular foot and slip the braider foot in its place and fasten. With the needle up; fasten the tucker firmly upon the bed of the machine by means of the regular thumb-screw, being careful to have it stand at right angles with the shuttle slide, and so that the guide will pass in front of the foot without touching it. Loosen the adjusting screw K (see cut of tucker page 4) and move the guide pointer L to the desired width of tuck as shown by scale M. For example, set it at the figure 1; now move the marker pointer O until it is at figure 1 on its scale also. The tucks will then be one-eighth of an inch wide and just meet. For space between the tucks, move the marker pointer O to the left as much as the space desired.

**THE HEMMERS**—5 widths. Attach the hemmer to the attachment holder same as Ruffler and pass the goods into the scroll, being careful to draw it through the hemmer as far as the needle hole that the feed may catch the cloth. Should too much goods run into the hemmer, carry to left.

**THE BINDER**—Attach binder to holder as above if cut binding is used, it should be bias and seven-eighths of an inch wide. Pass through binder and place goods between upper and lower scrolls.





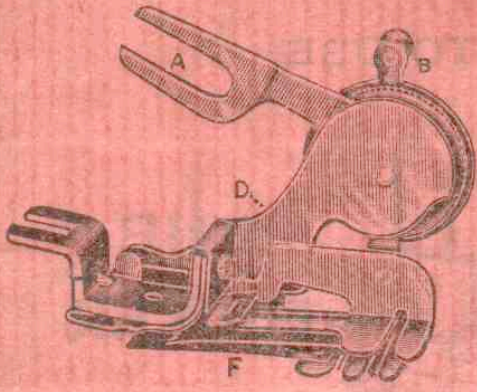

RUFFLER.



SHIRRING SLIDE

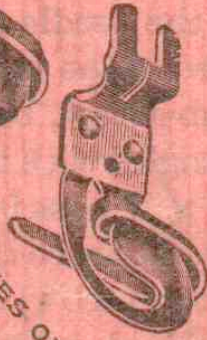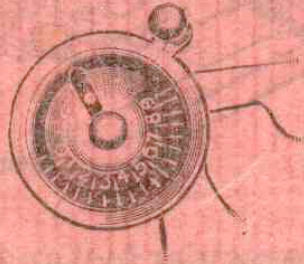


FIVE SIZES OF HEMMERS.



BRAIDER FOOT.



BRAIDER GUIDE.

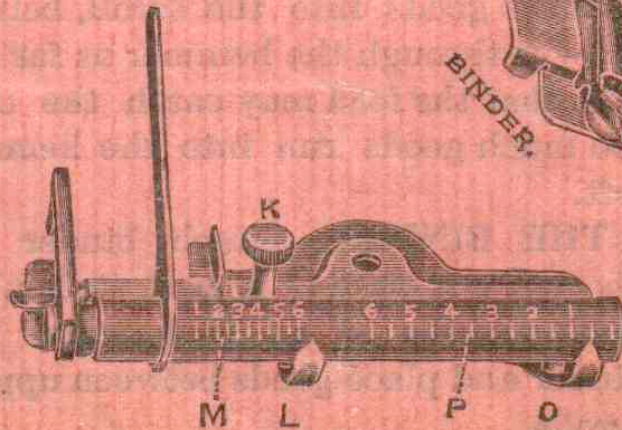

TUCKER.

BINDER.